

Models LR-PLUS and LR-PLUS-S Inner Plane Connection Chart

| | | | |
|----|------|------|----|
| 79 | GND | GND | 80 |
| 77 | | | 78 |
| 75 | | | 76 |
| 73 | | | 74 |
| 71 | GND | GND | 72 |
| 69 | | | 70 |
| 67 | | | 68 |
| 65 | | | 66 |
| 63 | | | 64 |
| 61 | GND | GND | 62 |
| 59 | | | 60 |
| 57 | | | 58 |
| 55 | | | 56 |
| 53 | | | 54 |
| 51 | GND | GND | 52 |
| 49 | | | 50 |
| 47 | | | 48 |
| 45 | | | 46 |
| 43 | | | 44 |
| 41 | 3.3V | 3.3V | 42 |
| 39 | | | 40 |
| 37 | | | 38 |
| 35 | | | 36 |
| 33 | | | 34 |
| 31 | GND | GND | 32 |
| 29 | | | 30 |
| 27 | | | 28 |
| 25 | | | 26 |
| 23 | | | 24 |
| 21 | 5V | 5V | 22 |
| 19 | | | 20 |
| 17 | | | 18 |
| 15 | | | 16 |
| 13 | | | 14 |
| 11 | GND | GND | 12 |
| 9 | | | 10 |
| 7 | | | 8 |
| 5 | | | 6 |
| 3 | | | 4 |
| 1 | 5V | 5V | 2 |

**Memory
Connector**

| | | | |
|----|------|------|----|
| 79 | GND | GND | 80 |
| 77 | GND | | 78 |
| 75 | | GND | 76 |
| 73 | | | 74 |
| 71 | | | 72 |
| 69 | | | 70 |
| 67 | | | 68 |
| 65 | | | 66 |
| 63 | | | 64 |
| 61 | GND | GND | 62 |
| 59 | | | 60 |
| 57 | | | 58 |
| 55 | | | 56 |
| 53 | | | 54 |
| 51 | GND | GND | 52 |
| 49 | | | 50 |
| 47 | | | 48 |
| 45 | | | 46 |
| 43 | GND | GND | 44 |
| 41 | | | 42 |
| 39 | | | 40 |
| 37 | GND | GND | 38 |
| 35 | | | 36 |
| 33 | | | 34 |
| 31 | GND | GND | 32 |
| 29 | | | 30 |
| 27 | | | 28 |
| 25 | GND | GND | 26 |
| 23 | | | 24 |
| 21 | | | 22 |
| 19 | 3.3V | 3.3V | 20 |
| 17 | | | 18 |
| 15 | | | 16 |
| 13 | | | 14 |
| 11 | | | 12 |
| 9 | 5V | 5V | 10 |
| 7 | GND | GND | 8 |
| 5 | 5V | 5V | 6 |
| 3 | GND | GND | 4 |
| 1 | | | 2 |

**Peripheral
Connector**